

## DIS

Camera shake during recording can be effectively reduced.


| Setting    | Details                                                                                                                              |
|------------|--------------------------------------------------------------------------------------------------------------------------------------|
| OFF        | Deactivates image stabilizer.                                                                                                        |
| ON         | Activates image stabilizer.                                                                                                          |
| ON(A.I.S.) | Reduces camera shake more effectively when shooting bright scenes on the wide angle end.<br>*Only on the wide angle end (approx. 5x) |

### Memo:

- It is recommended to set this mode to "OFF" when using a tripod and recording a subject with little movement.
- Complete stabilization may not be possible if camera shake is excessive.

## Displaying the Item

1 Press MENU to display the menu.

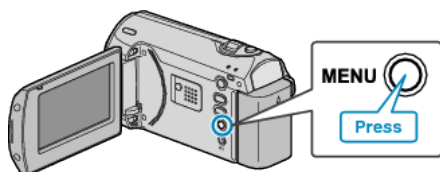

2 Select "DIS" with the ZOOM/SELECT lever and press OK.

