 



Protecting the Currently Displayed File

Protects or releases protection of the currently displayed file.


- 1 Select the playback mode.

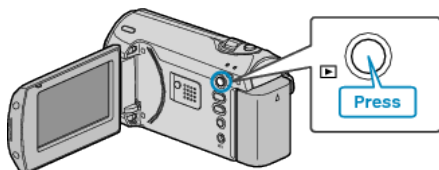

 
- 2 Press MENU to display the menu.

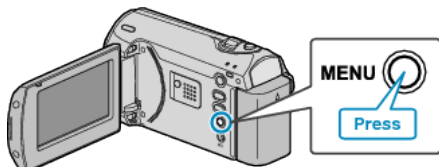

 - 3 Select "PROTECT/CANCEL" with the ZOOM/SELECT lever and press OK.

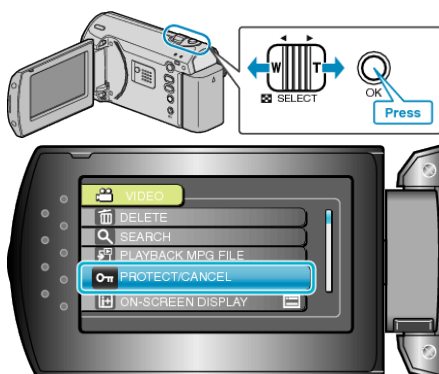

- 4 Select "CURRENT" and press OK.

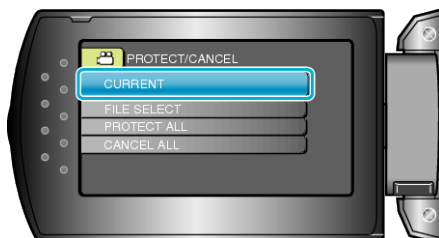 

- 5 Check that it is the file to protect, select "YES" and press OK.



- The file to protect appears on this screen.
- Press the +/- buttons to select the previous or next file.
- After setting, press OK.
- To exit the screen, press MENU.