


WIND CUT

Reduces the noise caused by wind.

Setting	Details
OFF	Deactivates the function.
ON	Activates the function.

Displaying the Item

1 Press MENU to display the menu.

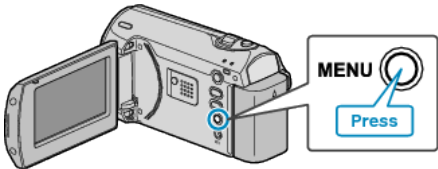

2 Select "WIND CUT" with the ZOOM/SELECT lever and press OK.

