Protecting Selected Files

Protects or releases protection of the selected files.


 ${\it 1}$ Select the playback mode.



2 Press MENU to display the menu.



 ${\it 3}$ Select "PROTECT/CANCEL" with the ZOOM/SELECT lever and press OK.

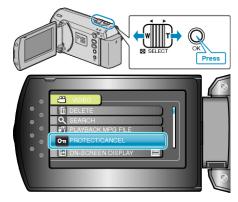

4 Select "FILE SELECT" and press OK.



5 Select the desired file and press OK.



- A protect mark appears on the selected file.

 To remove the protect mark, press OK again.
- After selecting all the files to protect or release protection of, press MENU.
- 6 Select "YES" and press OK.

