

Deleting Unwanted Files

Delete unwanted videos and still images when the space in the recording media is running out.

The capacity of the recording media can be restored after deleting the files.

"Deleting the Currently Displayed File" (P. 0)

"Deleting Selected Files" (P. 0)

"Deleting All Files" (P. 0)

NOTE:

- Deleted files cannot be restored.
- When files in a playlist are deleted, the playlist changes.
- Files that are protected cannot be deleted.
Release protection before deleting the file.

"Protecting Files" (P. 0)

- Be sure to back up important files on a PC.

"Backing Up All Files" (P. 0)
