 


Clock Setting

 
The "SET DATE/TIME!" screen appears when you turn on this unit for the first time after purchase, when it has not been used for a long time, or when the clock is not set yet.
Set the clock before recording.

1 Open the LCD monitor.

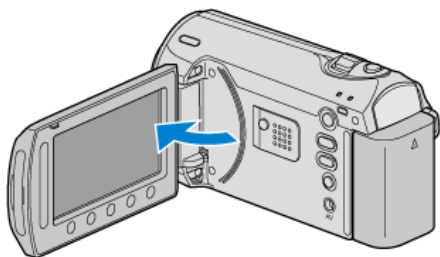


- This unit turns on.
- When the LCD monitor is closed, this unit turns off.

2 Select "YES" and touch **OK**.

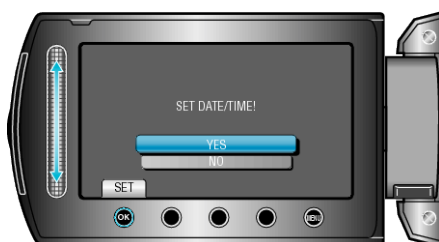

3 Set the date and time.

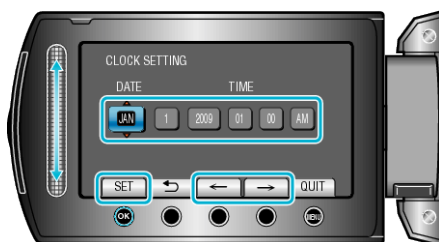 

- Use the slider to adjust the year, month, day, hour, and minute in order.
- Touch the operation buttons "←" / "→" to move the cursor.
- After setting the date and time, touch **OK**.

4 Select the region where you live and touch **OK**.



- The city name and time difference are displayed.
- Touch **OK** after the color of the selected region changes.

NOTE:

- The clock can be reset again later.

"Resetting the Clock" (P. 0)

- When using this unit overseas, you can set it to the local time for recording.

"Setting the Clock to Local Time when Traveling" (P. 0)

- "SET DATE/TIME!" is displayed when you turn on this unit after it has not been used for a prolonged period.

Charge this unit for more than 24 hours before setting the clock.

"Charging the Battery Pack" (P. 0)

- You can turn on or off the clock display during playback mode.

"ON-SCREEN DISPLAY" (P. 0)

- Touch the slider and buttons around the screen with your fingers.

- The slider and buttons do not function if you touch them with your fingernails or with gloves on.
- The displays on the screen do not work even if you touch them.