 



## Taking Videos in Auto Mode

You can record without worrying about the setting details by using the auto mode.

- 1 Open the lens cover.

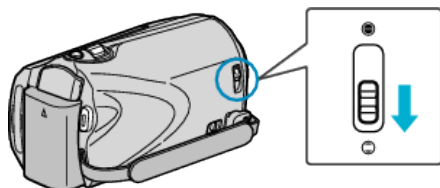

 - 2 Open the LCD monitor and select the video mode.

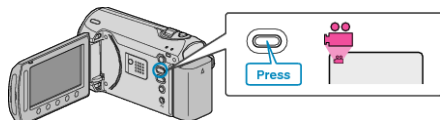


- The video mode icon appears.

- 3 Check if the recording mode is Auto.




- If the mode is Manual, touch the **A/M** button. The mode changes between Auto and Manual with every touch.

 - 4 Start recording.

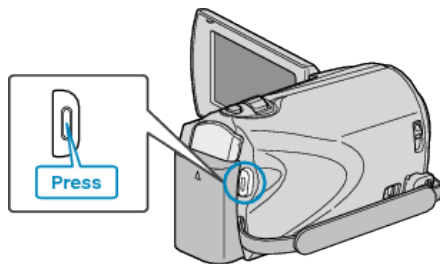


- Press again to stop.

## Indications During Video Recording

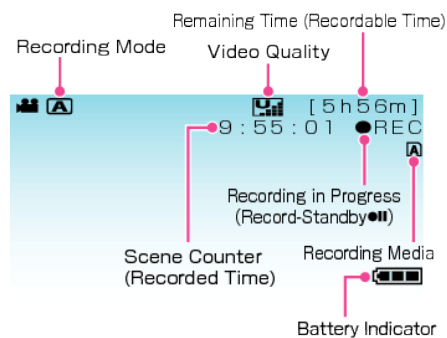 

Display Icon	Description
<b>Recording Mode</b>	Press the <b>A/M</b> button to switch the recording mode between <b>A</b> (Auto) and <b>M</b> (Manual).
<b>Video Quality</b>	Displays the icon of the "VIDEO QUALITY" setting selected in the recording menu. "VIDEO QUALITY" ( P. 0 )
<b>Remaining Time (Recordable Time)</b>	Displays the remaining time for video recording.
<b>Recording in Progress</b>	Appears when video recording is in progress.
<b>Record-Standby</b>	Appears when video recording is paused.
<b>Scene Counter (Recorded Time)</b>	Displays the elapsed time of the video that is currently being recorded.
<b>Recording Media</b>	Displays the icon of the media where videos are recorded to. The recording media can be changed. "REC MEDIA FOR VIDEO (GZ-MS250/GZ-MS240/GZ-MS230)" ( P. 0 ) "VIDEO SLOT SELECTION (GZ-MS210)" ( P. 0 )
<b>Battery Indicator</b>	Displays the approximate remaining battery power. Details of the battery power can be displayed by pressing the INFO button. "Remaining Recording Time/Battery Power" ( P. 0 )

## Operation Buttons for Video Recording

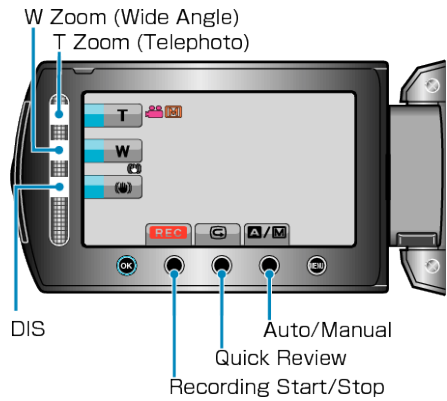 

- Before recording an important scene, it is recommended to conduct a trial recording.
- Check the remaining recording time in the media before you start shooting. If there is not enough space, move (copy) the data to a PC or disc.
- Do not forget to make copies after recording!
- Recording stops automatically as it cannot be performed for 12 or more consecutive hours according to specifications. (It may take some time to resume recording.)
- For long recordings, the file is split into two or more files if the size exceeds 4 GB.
- You can connect this unit to the AC adapter to record for long hours indoors.

Operation Button	Description
<b>T/W Zoom</b>	Allows the same functions as the zoom lever to be performed. Camera shake that often occurs when using the zoom lever can be minimized. "Zooming" ( P. 0 )
<b>DIS</b>	Sets whether to reduce camera shake. "Reducing Camera Shake" ( P. 0 )
<b>Recording Start/Stop</b>	Functions as the START/STOP button. "RECORD BUTTON" ( P. 0 )
<b>Quick Review</b>	Enables the most recently captured video to be viewed. "Checking the Captured Image Immediately" ( P. 0 )
<b>Auto/Manual</b>	Switches the recording mode between Auto and Manual.

### NOTE:

- The slider operation button cannot be used when the LCD monitor is flipped.
- The zoom appears when the slider is touched.

## Useful Settings for Recording

- The aspect ratio for recording can be switched between 16:9 and 4:3.  
"SELECT ASPECT RATIO" ( P. 0 )
- Videos can be found easily during playback by categorizing them when recording.  
"Registering Files to Events Before Recording" ( P. 0 )
- When "QUICK RESTART" is set to "ON", this unit turns on immediately if you open the LCD monitor within 5 minutes after the power is turned off by closing the monitor.  
"QUICK RESTART" ( P. 0 )
- When "AUTO POWER OFF" is set to "ON", this unit turns itself off automatically to conserve power when it is not operated for 5 minutes. (only when using the battery pack)  
"AUTO POWER OFF" ( P. 0 )

### CAUTION:

- Do not expose the lens to direct sunlight.
- Do not use this unit in the rain, snow, or places with high humidity like the bathroom.
- Do not use this unit in places subject to excessive humidity or dust, as well as places exposed to steam or smoke directly.
- The access lamp lights up when video recording is in progress. Do not remove the battery pack, AC adapter, or SD card when the lamp is lighted.
- Make a backup of important recorded data  
It is recommended to copy your important recorded data to a DVD or other recording media for storage. JVC will not be responsible for any lost data.

### NOTE: