
Unable to copy to SD card.

To record to the card, it is necessary to perform media settings.

"REC MEDIA FOR VIDEO (GZ-MS250/GZ-MS240/GZ-MS230)" (P. 0)

"VIDEO SLOT SELECTION (GZ-MS210)" (P. 0)

To use cards that have been used on other devices, it is necessary to format (initialize) the card using "FORMAT SD CARD" from media settings.

"FORMAT SD CARD" (P. 0)