

**FORMAT BUILT-IN MEM. (GZ-MS250/GZ-MS240/GZ-MS230)**

Deletes all files on the built-in memory.


Setting	Details
FILE	Deletes all files on the built-in memory.
FILE + MANAGEMENT NO	Deletes all files on the internal memory and resets the folder and file numbers to "1".

**CAUTION:**

- All data on the built-in memory will be deleted when it is formatted. Copy all files on the built-in memory to a PC before formatting.
- Make sure that the battery pack is fully charged or connect the AC adapter as the formatting process may take some time.

**Displaying the Item**

1 Touch **Ⓜ** to display the menu.

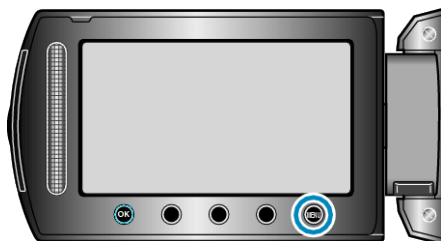

2 Select "MEDIA SETTINGS" and touch **Ⓜ**.



3 Select "FORMAT BUILT-IN MEM." and touch **Ⓜ**.

