Verifying the Accessories

If any of the items are missing or defective, consult your JVC dealer or the nearest JVC service center.

Illustration	Description
	AC Adapter AP-V30U Connects to this unit to charge the battery pack. It can also be used when recording or playing back videos indoors.
b	Battery Pack BN-VG107U Attaches to this unit to supply power.
	AV Cable Connects this unit to a TV to play back recorded images on the TV.
	USB Cable (Type A - Mini Type B) Connects this unit to a PC.
	CD-ROM • For installing the provided software "Everio MediaBrowser" on a PC.
	Core Filter (GZ-MS250/GZ-MS240/GZ-MS230)
NOTE:	Basic User Guide Read well and keep in a safe place where it can be accessed easily when necessary.

SD cards are sold separately.
"Types of Usable SD Card" (P. 0)
When using the AC adapter overseas, please prepare a commercially available converter plug for the country or region of visit.
"Charging the Battery Pack Overseas" (P. 0)