


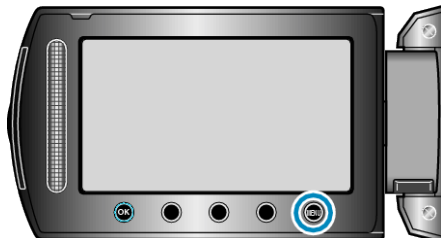
REC MEDIA FOR IMAGE (GZ-MS250/GZ-MS240/GZ-MS230)

Sets the recording/playback media of still images.

Setting	Details
BUILT-IN MEMORY	Records still images to the camcorder's built-in memory.
SD CARD	Records still images to the SD card.

Displaying the Item

1 Touch  to display the menu.



2 Select "MEDIA SETTINGS" and touch .



3 Select "REC MEDIA FOR IMAGE" and touch .

