
Cannot insert the SD card.

Make sure not to insert the card in the wrong direction.

"Inserting an SD Card (GZ-MS250/GZ-MS240/GZ-MS230)" (P. 0)

"Inserting an SD Card (GZ-MS210)" (P. 0)