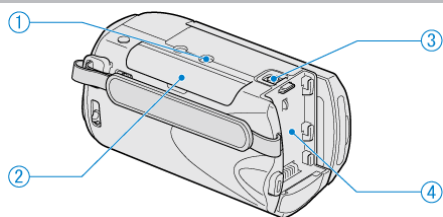


Bottom**1** Tripod Mounting Hole

"Tripod Mounting" (P. 0)

2 SD Card Slot

• Insert an optional SD card.

"Inserting an SD Card (GZ-MS250/GZ-MS240/GZ-MS230)" (P. 0)

"Inserting an SD Card (GZ-MS210)" (P. 0)

3 Battery Release Lever

"Charging the Battery Pack" (P. 0)

4 Battery Mount