


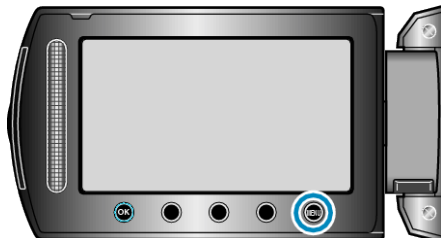
**REC MEDIA FOR VIDEO (GZ-MS250/GZ-MS240/GZ-MS230)**

Sets the recording/playback media of videos.

Setting	Details
BUILT-IN MEMORY	Records videos to the camcorder's built-in memory.
SD CARD	Records videos to the SD card.

**Displaying the Item**

1 Touch  to display the menu.



2 Select "MEDIA SETTINGS" and touch .



3 Select "REC MEDIA FOR VIDEO", and touch .

