

Still Image Playback



1 Still Image Mode

" (Video/Still Image) Button" (P. 0)

2 Folder Number

3 File Number

4 Operation Indicator

"Playing Back Still Images" (P. 0)

5 Media

"REC MEDIA FOR IMAGE (GZ-MS250/GZ-MS240/GZ-MS230)" (P. 0)

"IMAGE SLOT SELECTION (GZ-MS210)" (P. 0)

6 Battery Indicator

"Remaining Recording Time/Battery Power" (P. 0)

7 Date/Time

"Clock Setting" (P. 0)