
NO FILES

Change the setting in "REC MEDIA FOR VIDEO" or "REC MEDIA FOR IMAGE", and check that files are not recorded to the other media.

"REC MEDIA FOR VIDEO (GZ-MS250/GZ-MS240/GZ-MS230)" (P. 0)

"REC MEDIA FOR IMAGE (GZ-MS250/GZ-MS240/GZ-MS230)" (P. 0)

"VIDEO SLOT SELECTION (GZ-MS210)" (P. 0)

"IMAGE SLOT SELECTION (GZ-MS210)" (P. 0)