

DATA DELETION ERROR (GZ-MS250/GZ-MS240/GZ-MS230)

Check the operating procedure, and perform once again.

"ERASE ALL DATA (GZ-MS250/GZ-MS240/GZ-MS230)" (P. 0)

Turn off this unit, and turn it on again.