


Deleting Selected Files

Deletes the selected files.


CAUTION:

- Deleted files cannot be restored.


1 Select the playback mode.

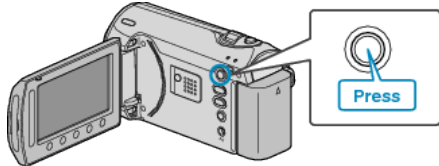

2 Select video or still image mode.

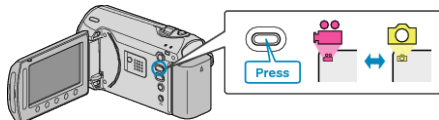

3 Touch **OK** to display the menu.

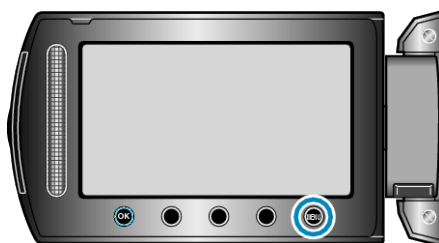 

4 Select "DELETE" and touch **OK**.



5 Select "FILE SELECT" and touch **OK**.



6 Select the desired file and touch **OK**.



- A delete mark appears on the selected file. To remove the delete mark, touch **OK** again.
- Touch "CHECK" to check the selected file.

7 After selecting all the files to delete, touch "EXEC".



8 Select "YES" and touch **OK**.



- After deleting, touch **OK**.

NOTE:

- When files in a playlist are deleted, the playlist changes.
- Files that are protected cannot be deleted. Release protection before deleting the file.

"Protecting Files" (P. 0)