


VIDEO QUALITY

Sets the video quality.


Setting	Details
ULTRA FINE	Enables recording in the best picture quality.
FINE	Enables recording in high picture quality.
NORMAL	Enables recording in standard quality.
ECONOMY	Enables long recordings.

Displaying the Item

1 Select video mode.

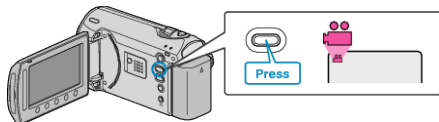

2 Touch **Ⓜ** to display the menu.

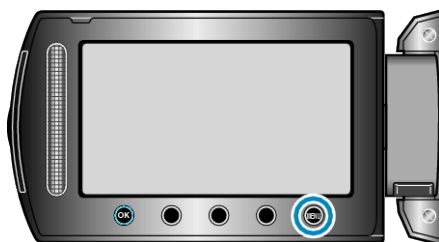

3 Select "VIDEO QUALITY" and touch **ⓧ**.



NOTE:

- You can change the video quality from the remaining recording time display.
Select the video quality with the slider and touch **ⓧ**.