

---

**MAXIMUM QUANTITY RECORDING FOLDERS/FILES HAS BEEN REACHED**

- ① Move the files or folders to a PC or other device. (Back up your files.)
- ② Select "FILE + MANAGEMENT NO" in "FORMAT BUILT-IN MEM." (GZ-MS250/GZ-MS240/GZ-MS230) or "FORMAT SD CARD" of the media settings menu. (All data on the built-in memory or SD card will be deleted.)