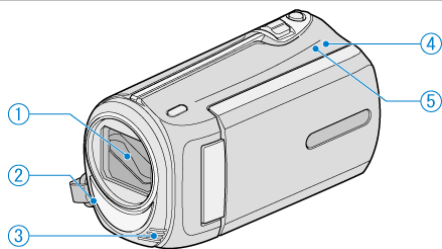


Front**1** Lens/Lens Cover

- Do not touch the lens and lens cover.

2 Light (GZ-MS250/GZ-MS240/GZ-MS230)

- Turn on the light when shooting in dark places.

"LIGHT (GZ-MS250/GZ-MS240/GZ-MS230)" (P. 0)

3 Stereo Microphone

- Do not cover the microphone with your fingers during video recording.

4 POWER/CHARGE Lamp

- Lights up: Power "ON"
- Blinks: Charging in progress
- Goes out: Charging finished

5 ACCESS Lamp

- Recording or playback is in progress when the lamp lights up or blinks.
Do not remove the battery pack, AC adapter, or SD card.