

## Media Settings Menu

You can perform various settings for the recording media.

Setting	Details
REC MEDIA FOR VIDEO	Sets the recording/playback media of videos. "REC MEDIA FOR VIDEO (GZ-MS250/GZ-MS240/GZ-MS230)" ( P. 0 )
VIDEO SLOT SELECTION	Sets the recording/playback SD slot of videos. "VIDEO SLOT SELECTION (GZ-MS210)" ( P. 0 )
REC MEDIA FOR IMAGE	Sets the recording/playback media of still images. "REC MEDIA FOR IMAGE (GZ-MS250/GZ-MS240/GZ-MS230)" ( P. 0 )
IMAGE SLOT SELECTION	Sets the recording/playback SD slot of still images. "IMAGE SLOT SELECTION (GZ-MS210)" ( P. 0 )
FORMAT BUILT-IN MEM.	Deletes all files on the built-in memory. "FORMAT BUILT-IN MEM. (GZ-MS250/GZ-MS240/GZ-MS230)" ( P. 0 )
FORMAT SD CARD	Deletes all files on the SD card. "FORMAT SD CARD" ( P. 0 )
ERASE ALL DATA	Execute this process when disposing of this unit or passing it to another person. "ERASE ALL DATA (GZ-MS250/GZ-MS240/GZ-MS230)" ( P. 0 )