## **Recording Menu (Still Image)**

You can adjust various settings, such as brightness and white balance, to suit the subject or purpose. You can also change settings such as picture quality and gain.

| Setting        | Details  |
|----------------|--|
| MANUAL SETTING | Recording settings can be adjusted manually.  • They are displayed only when recording in the manual mode.  "Manual Recording" (© P. 0 )   |
| LIGHT          | Turns on/off the light. "LIGHT (GZ-MS250/GZ-MS240/GZ-MS230)" ( PROPROGRAMS P. 0 )  |
| SELF-TIMER     | Use this when taking a group photo. "SELF-TIMER" (© P. 0 )   |
| SHUTTER MODE   | Continuous shooting settings can be adjusted. "SHUTTER MODE" (1878 P. 0 )  |
| IMAGE QUALITY  | Sets the image quality. "IMAGE QUALITY" (© P. 0 )  |
| GAIN UP        | Makes the subject appear bright automatically when recording in dark places.  "GAIN UP" (1887 P. 0 )   |
| AUTO REC       | Enables the unit to record still images automatically by sensing the changes in brightness within the red frame displayed on the LCD monitor.  "Recording Automatically by Sensing Movements (AUTO REC)" (FROM P. 0) |