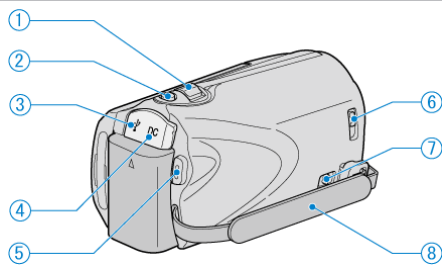


Rear

**1** Zoom/Volume Lever

- During shooting: Adjusts the shooting range.
- During playback (index screen): Changes the number of images to display.
- During video playback: Adjusts the volume.

2 SNAPSHOT (Still image recording) Button

- Takes a still image.

3 USB Terminal

- Connects to PC using a USB cable.

4 DC Terminal

- Connects to an AC adapter to charge the battery.

5 START/STOP (Video recording) Button

- Starts/stops video recording.

6 Lens Cover Switch

- Opens and closes the lens cover.

7 Grip Belt Release Lever

- Allows the grip belt to be removed and used as a hand strap.

8 Grip Belt

- Pass your hand through the grip belt to hold this unit firmly.

###Err:\$linktoc;### ([Error!] ページ)