Recording cannot be performed.

Check the ♣️/O switch.
"Interior" (☞ P. 0)
Set to the recording mode with the ▶ (Play) Button.
"Interior" (☞ P. 0)