


Common Recording Indications

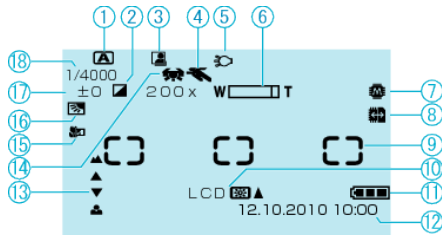

1 Recording Mode

"Taking Videos in Auto Mode" (P. 0)

"Manual Recording" (P. 0)

2 Effect

"Recording with Effects (GZ-MS230)" (P. 0)

3 Auto REC

"Recording Automatically by Sensing Movements (AUTO REC)" (P. 0)

4 Scene Select

"Scene Selection" (P. 0)

5 Light

"LIGHT" (P. 0)

6 Zoom

"ZOOM" (P. 0)

7 Media

"REC MEDIA FOR VIDEO (GZ-MS230)" (P. 0)

"VIDEO SLOT SELECTION (GZ-MS215)" (P. 0)

"REC MEDIA FOR IMAGE (GZ-MS230)" (P. 0)

"IMAGE SLOT SELECTION (GZ-MS215)" (P. 0)

8 AUTO SWITCH REC MEDIA

"AUTO SWITCH REC MEDIA" (P. 0)

9 Metering Area "SPOT"

"Setting Metering Area" (P. 0)

10 Monitor Backlight

"LCD BACKLIGHT" (P. 0)

11 Battery Indicator

"Remaining Recording Time/Battery Power" (P. 0)

12 Date/Time

"Clock Setting" (P. 0)

13 Focus

"Adjusting Focus Manually" (P. 0)

14 White Balance

"Setting White Balance" (P. 0)

15 Tele Macro

"Taking Close-up Shots" (P. 0)

16 Backlight Compensation

"Setting Backlight Compensation" (P. 0)

17 Brightness

"Adjusting Brightness" (P. 0)

18 Shutter Speed

"Setting Shutter Speed" (P. 0)