

---

**Unable to copy to SD card.**

To record to the card, it is necessary to perform media settings.

"REC MEDIA FOR VIDEO (GZ-MS230)" (P. 0 )

To use cards that have been used on other devices, it is necessary to format (initialize) the card using "FORMAT SD CARD" from media settings.

"FORMAT SD CARD" (P. 0 )