 



Protecting Selected Files

Protects or releases protection of the selected files.


1 Select the playback mode.

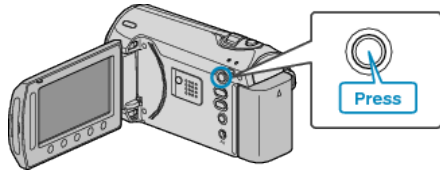

 2 Select video or still image mode.

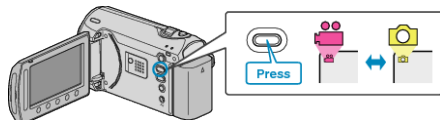

3 Touch **MENU** to display the menu.

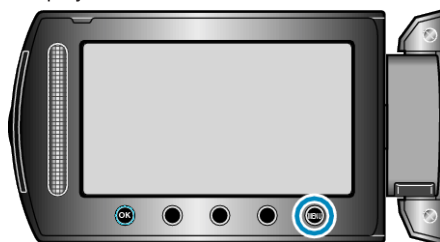 

4 Select "EDIT" and touch **OK**.



5 Select "PROTECT/CANCEL" and touch **OK**.



6 Select "FILE SELECT" and touch **OK**.



7 Select the desired file and touch **OK**.



- A protect mark appears on the selected file.
To remove the protect mark, touch **OK** again.
 - Touch "CHECK" to check the selected file.
- 8 After selecting all the files to protect or release protection of, touch **MENU**.