



Deleting Playlists

Delete the playlists that you have created.

1 Select the playback mode.

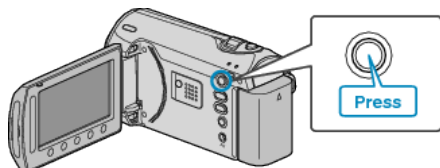

2 Select video mode.

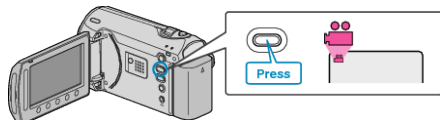

3 Touch **Ⓜ** to display the menu.



4 Select "EDIT PLAYLIST" and touch **Ⓚ**.



5 Select "DELETE" and touch **Ⓚ**.



6 Select the playlist you want to delete and touch **Ⓚ**.



• All created playlists will be deleted when "DELETE ALL" is selected.

7 Select "YES" and touch **Ⓚ**.



- After deleting is complete, the screen returns to the delete playlist selection screen.
- After deleting, touch **Ⓜ**.