


## Video Playback

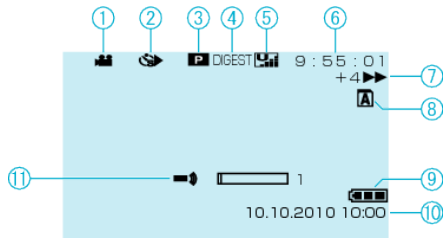

### 1 Video Mode

"Video/Still Image Button" ( P. 0 )

### 2 Time-Lapse Recording

"Recording at Intervals (TIME-LAPSE RECORDING)" ( P. 0 )

### 3 Playlist Playback

"Playing Back Playlists" ( P. 0 )

### 4 Digest Playback

"Checking the Content of Videos Quickly" ( P. 0 )

### 5 Video Quality

"VIDEO QUALITY" ( P. 0 )

### 6 Scene Counter

### 7 Operation Indicator

"Playing Back Videos" ( P. 0 )

### 8 Media

"REC MEDIA FOR VIDEO (GZ-MS230)" ( P. 0 )

"VIDEO SLOT SELECTION (GZ-MS215)" ( P. 0 )

### 9 Battery Indicator

"Remaining Recording Time/Battery Power" ( P. 0 )

### 10 Date/Time

"Clock Setting" ( P. 0 )

### 11 Speaker Volume Adjustment