
Cannot insert the SD card.

Make sure not to insert the card in the wrong direction.

"Inserting an SD Card (GZ-MS230)" (P. 0)