

---

## NO FILES

Change the setting in "REC MEDIA FOR VIDEO" or "REC MEDIA FOR IMAGE", and check that files are not recorded to the other media.

"REC MEDIA FOR VIDEO (GZ-MS230)" (P. 0 )

"REC MEDIA FOR IMAGE (GZ-MS230)" (P. 0 )