REC MEDIA FOR VIDEO (GZ-MS230)

Sets the recording/playback media of videos.

| Setting | Details |
|-----------------|--|
| BUILT-IN MEMORY | Records videos to the camcorder's built-in memory. |
| SD CARD | Records videos to the SD card. |

Displaying the Item

 ${\it 1}$ Touch ${\it \tiny oxed{e}}$ to display the menu.



2 Select "MEDIA SETTINGS" and touch @.



 $\it 3$ Select "REC MEDIA FOR VIDEO", and touch $\it ©$ s.

