


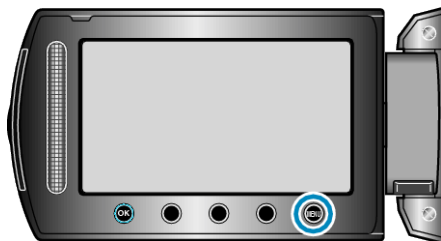
## VIDEO SLOT SELECTION (GZ-MS215)

Sets the recording/playback media of videos.

Setting	Details
SLOT A	Records videos to the SD card in slot A.
SLOT B	Records videos to the SD card in slot B.

### Displaying the Item

1 Touch  to display the menu.



2 Select "MEDIA SETTINGS" and touch .



3 Select "VIDEO SLOT SELECTION" and touch .

