



Operating the Menu

Use the slider and operation buttons to set the menu.


- The menu differs according to the mode in use.

1 Touch  to display the menu.

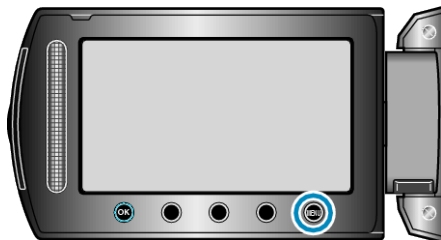




2 Select the desired menu and touch .



3 Select the desired setting and touch .



NOTE:

- To close the menu, touch .
- To return to the previous screen, touch .
- To display the help file, touch .

Returning All Settings to Default :

- Set using "FACTORY PRESET" in the camera settings menu.

"FACTORY PRESET" ( P. 0)