## Front



- 1 Lens/Lens Cover
- Do not touch the lens and lens cover.
- 2 Light
- Turn on the light when shooting in dark places.
- "LIGHT" (🖙 P. 0 )
- 3 Stereo Microphone
- Do not cover the microphone with your fingers during video recording.
- 4 POWER/CHARGE Lamp
- Lights up: Power "ON"
- Blinks: Charging in progress
- Goes out: Charging finished
- 5 ACCESS Lamp
- Recording or playback is in progress when the lamp lights up or blinks. Do not remove the battery pack, AC adapter, or SD card.