


## Setting Metering Area

You can set the brightness of a specified area as the standard.


1 Touch **MENU** to display the menu.

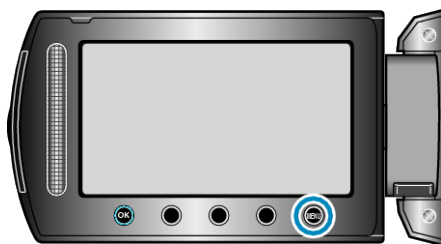

2 Select "MANUAL SETTING" and touch **OK**.



3 Select "METERING AREA/ TYPE" and touch **OK**.

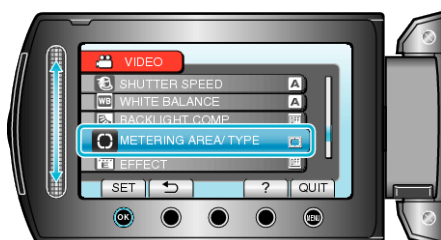

4 Select "SPOT" and touch **OK**.



- When "SPOT" is selected, select the position of the spot frame by touching the operation buttons "**←**" / "**→**". After selecting, touch **OK** to confirm.