


## Still Image Playback

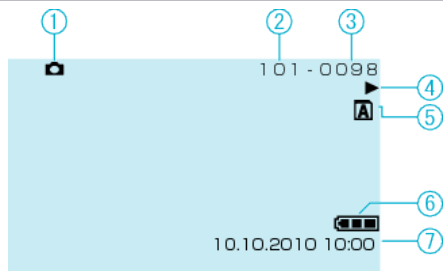

**1** Still Image Mode

" (Video/Still Image) Button" (P. 0 )

**2** Folder Number

**3** File Number

**4** Operation Indicator

"Playing Back Still Images" (P. 0 )

**5** Media

"REC MEDIA FOR IMAGE (GZ-MS230)" (P. 0 )

"IMAGE SLOT SELECTION (GZ-MS215)" (P. 0 )

**6** Battery Indicator

"Remaining Recording Time/Battery Power" (P. 0 )

**7** Date/Time

"Clock Setting" (P. 0 )