

## AUTO SWITCH REC MEDIA


Switches to another recording media to continue recording when the remaining space on the current recording media runs out.


- Recording may be slightly disrupted due to time lag when switching media.


Setting	Details
OFF	Does not switch recording media automatically.
ON	Switches recording media automatically.

### Displaying the Item

- Select video mode.

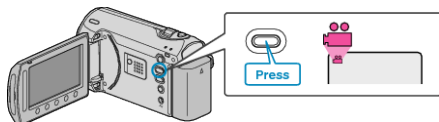

- Touch  to display the menu.

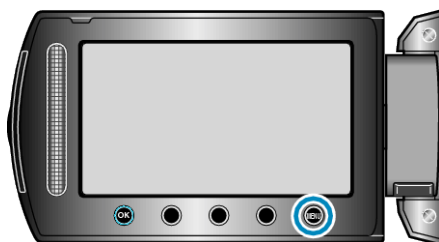

- Select "AUTO SWITCH REC MEDIA" and touch .

