

 
Deleting All Files

Deletes all files.


CAUTION:

- Deleted files cannot be restored.


1 Select the playback mode.

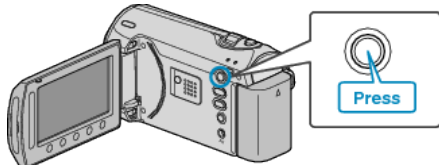

2 Select video or still image mode.

 

3 Touch \odot to display the menu.

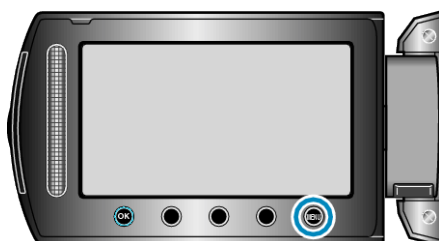 

4 Select "DELETE" and touch \odot .



5 Select "DELETE ALL" and touch \odot .



6 Select "YES" and touch \odot .



- After deleting, touch \odot .

NOTE:

- When files in a playlist are deleted, the playlist changes.
- Files that are protected cannot be deleted.
Release protection before deleting the file.

"Protecting Files" (P. 0)