## **Manual Recording**

You can adjust settings, such as brightness and shutter speed, by using the manual mode.

Manual recording can be set for both video and still image modes.


 ${\it 1}$  Select video or still image mode.



- The video or still image mode icon appears.
- 2 Select the Manual recording mode.



- The mode changes between Auto and Manual with every touch.
- 3 Start recording.

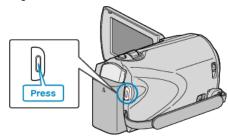

• Press again to stop.

## NOTE:-

• The manual settings are displayed only in the manual mode.

## **Manual Recording Menu**

The following items can be set.

Name	Description
SCENE SE- LECT	Recordings that suit the shooting conditions can be performed easily.  "Scene Selection" (     P. 0 )
FOCUS	Use manual focus if the subject is not focused automatically.  "Adjusting Focus Manually" (FR P. 0)
BRIGHT- NESS AD- JUST	Overall brightness on the screen can be adjusted.  Use this when recording in a dark or bright location.  "Adjusting Brightness" (FET P. 0 )
SHUTTER SPEED	Shutter speed can be adjusted.  Use this when shooting a fast-moving subject or to emphasize the subject's movement.  "Setting Shutter Speed" (FOR P. 0)
WHITE BAL- ANCE	Overall color on the screen can be adjusted.  Use this when the color on the screen appears differently from the actual color.  "Setting White Balance" (FOR P. 0)
BACKLIGHT COMP.	Corrects the image when the subject appears dark due to backlight.  Use this when shooting against the light.  Setting Backlight Compensation (FF P. 0)
METERING AREA/ TYPE	Brightness of a specified area can be set as the standard.  "Setting Metering Area" ( P. 0 )
EFFECT	Images that look like old photographs or black-and-white movies can be taken.  "Recording with Effects (GZ-MS230)" (ISP P. 0 )
TELE MAC- RO	Use this to take close-up (macro) shots of the subject.  "Taking Close-up Shots" (FROM P. 0 )