


## Deleting All Files

Deletes all files.


### CAUTION:

- Deleted files cannot be restored.


1 Select the playback mode.

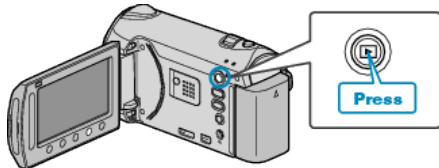

2 Select video or still image mode.

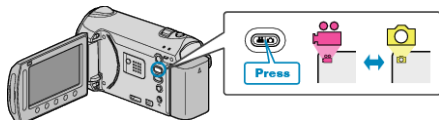

3 Touch  $\odot$  to display the menu.

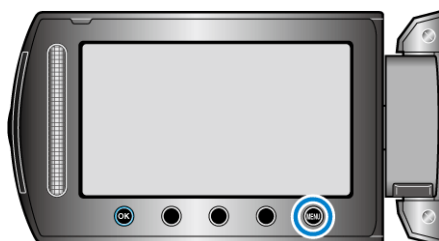

4 Select "DELETE" and touch  $\odot$ .



5 Select "DELETE ALL" and touch  $\odot$ .



6 Select "YES" and touch  $\odot$ .



- After deleting, touch  $\odot$ .

### Memo:

- When files in a playlist are deleted, the playlist changes.
- Files that are protected cannot be deleted.  
Release protection before deleting the file.