



## Changing the Event of the Currently Displayed File

Checks and changes the event of the currently displayed file.


1 Select the playback mode.

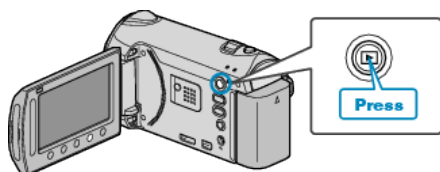

2 Select video mode.

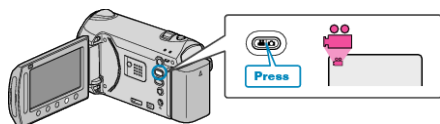

3 Touch **MENU** to display the menu.

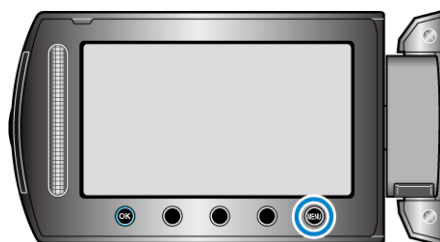 


4 Select "EDIT" and touch **OK**.



5 Select "CHANGE EVENT REG." and touch **OK**.



6 Select "CURRENT" and touch **OK**.

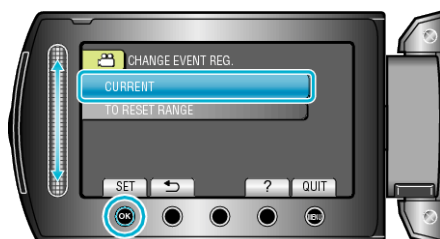

7 Select the file you want to register and touch **OK**.



• The file to register appears on this screen.

• Touch the operation buttons "←" / "→" to select the previous or next file.

8 Select a new event and touch **OK**.



• You can cancel the registered event by touching "CANCEL".

• After setting, touch **OK**.

• To exit the screen, touch **MENU**.