Adjusting Focus Manually

Set this when the focus is not clear in "AUTO" or when manual focusing is desired.

1 Touch (e) to display the menu.



2 Select "MANUAL SETTING" and touch ®



3 Select "FOCUS" and touch @



4 Select "MANUAL" and touch @.



5 Adjust the focus with the slider.



- Slide upward to focus on a distant subject.
- Slide downward to focus on a near subject.
- 6 Touch ® to confirm.



Memo

 A subject that is focused at the telephoto (T) end remains in focus when it is zoomed out to the wide angle (W) end.