

Playback Menu (Video)

You can delete or look for specific videos.

Setting	Details
DELETE	Deletes unwanted videos.
PICTURE TITLE (GZ-HM340/GZ-HM320)	Create a playlist simply by selecting a recording date and a title screen from the list.
SEARCH	Refines the index screen of videos according to group, recording date, or event.
PLAYBACK PLAYLIST	Play back the playlists that you have created.
EDIT PLAYLIST	Creates or edits a playlist.
PLAYBACK OTHER FILE	Plays videos with defective management information.
EDIT	<ul style="list-style-type: none"> ● COPY Copies files to another media. ● MOVE Moves files to another media. ● PROTECT/CANCEL Protects files from being deleted accidentally. ● DIVIDE Divides a selected video into two. ● TRIMMING Select the required part of a video and save it as a new video file. ● CHANGE EVENT REG. Changes the event that is registered.
SEAMLESS REC CTRL	Videos that are recorded on two separate media and with "SEAMLESS RECORDING" in the video recording menu enabled can be combined into a single video.
WIPE/FADER	Adds effects at the beginning and end of recorded videos.
ON-SCREEN DISPLAY	Sets whether to show on-screen displays such as icons during playback.