
RECORDING CANCELLED

Set "REC MEDIA FOR VIDEO" to "SD", then record to a SD card.
Turn off the unit, and turn it on again.
Protect the unit from vibration and shock.