


SEAMLESS RECORDING

This function enables an ongoing video recording that has reached its media's maximum capacity to be recorded continuously without frame loss by automatically switching the recording to another media. It is also possible for the scenes to be merged into one of the media once the recording is complete.


Setting	Details
OFF	Does not switch recording media automatically.
ON	Switches recording media automatically.

Displaying the Item

1 Select video mode.

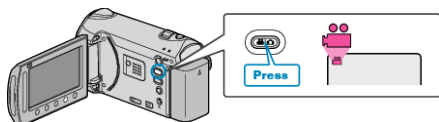

2 Touch **OK** to display the menu.

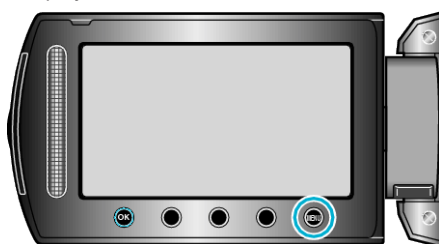

3 Select "SEAMLESS RECORDING" and touch **OK**.



4 Select "ON" and touch **OK**.



Warning

- Auto switching of media cannot be performed when a write protected memory card, an unformatted media, or an incompatible media is used.
- The function does not work when there is less than 1 minute of recording time left in the other media.
- Recording cannot be performed when the seamless recording disabled icon [SEAMLESS_NO] is displayed.

Memo:

- Seamless recording allows the unit to automatically switch to another media if the targeted media for recording is unavailable or has less than 1 second of recording time left.
- Once a seamless recording is complete, the function is automatically disabled. Combine the recorded scenes or delete the scene combination information to reactivate it.
- Seamless videos that are recorded on two separate media can be combined into a single video.