

FORMAT SD CARD

Deletes all files on the SD card.

Setting	Details
FILE	Deletes all files on the SD card.
FILE + MANAGEMENT NO	Deletes all files on the SD card and resets the folder and file numbers to "1".

CAUTION:

- Not available for selection when no SD card is inserted.
- All data on the card will be deleted when it is formatted. Copy all files on the card to a PC before formatting.
- Make sure that the battery pack is fully charged or connect the AC adapter as the formatting process may take some time.
- Format a newly purchased SD card with this unit before use.


6 Select "YES" and touch **OK**.



- After formatting, touch **OK**.

Displaying the Item

1 Touch **OK** to display the menu.

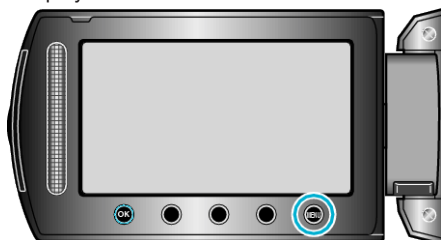


2 Select "MEDIA SETTINGS" and touch **OK**.



3 Select "FORMAT SD CARD" and touch **OK**.



4 **GZ-HM300**
Select the card slot.

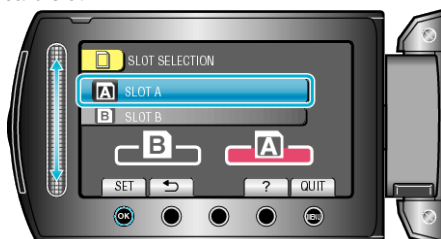

- For GZ-HM340/GZ-HM320, proceed to step 5.

5 Select the setting and touch **OK**.

