Protecting the Currently Displayed File

Protects or releases protection of the currently displayed file.

1 Select the playback mode.



2 Select video or still image mode.



3 Touch em to display the menu.



4 Select "EDIT" and touch ®.



5 Select "PROTECT/CANCEL" and touch @.



6 Select "CURRENT" and touch .



7 Check that it is the file to protect or release protection of, select "YES" and touch ".



- The file to protect or release protection of appears on this screen.
- Touch the operation buttons "←" / "→" to select the previous or next file.
- After setting, touch ®.
- To exit the screen, touch .