• To exit the screen, touch .

Adding Title Screens to Playlists (GZ-HM340/GZ-HM320)

Add a title screen to a created playlist.

1 Select the playback mode.



2 Select video mode.



3 Touch to display the menu.



4 Select "EDIT PLAYLIST" and touch @s.



5 Select "SET TITLE" and touch @.



6 Select the desired playlist and touch 68.



- Touch "CHECK" to check the content of the selected playlist.
- 7 Select a title and touch .



- Touch "CHECK" to check the title.
- To delete the title, select "NO TITLE".
- After setting, touch [®].